




OWNER'S MANUAL

KWANG YANG MOTOR CO.,LTD.

PEOPLE S 4 Stroke
125 / 200

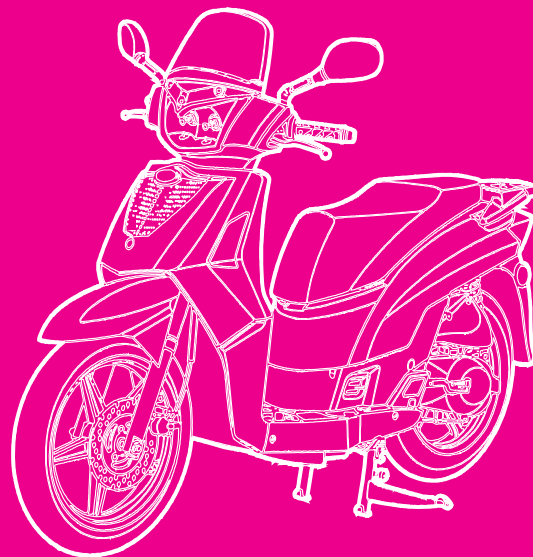

Dear KYMCO Scooter Users:

Thank you for purchasing this KYMCO scooter and welcome to the family of KYMCO scooter riders. To enjoy safer and more pleasant riding, become thoroughly familiar with this owner's manual before you ride the scooter. Your safety depends not only on your own alertness and familiarity with the scooter but also the scooter mechanical condition. A pre-ride inspection before every outing and regular maintenance are essential. The quality of each KYMCO scooter is guaranteed.

- Note:**
1. The information and specifications stated in this manual are for reference only and subject to change without notice.
 2. When starting the engine, the battery must be installed to facilitate starting and increase the engine performance.

TABLE OF CONTENTS

1.PRECAUTIONS FOR A SAFE RIDING	1
2.PARTS LOCATION	3
FRAME NUMBER	6
ENGINE NUMBER 、 KEY NUMBER	7
3.OPERATION INSTRUCTIONS	8
IGNITION SWITCH/STEERING HANDLEBAR LOCK	8
ELECTRIC STARTER BUTTON 、 HEADLIGHT SWITCH	9
HEADLIGHT DIMMER SWITCH/PASSING SIGNAL SWITCH	10
HORN BUTTON/TURN SIGNAL SWITCH	11
SEAT LOCK/MET-IN BOX	12
HELMET HOLDER	12
INSTRUMENTS AND INDICATORS	13
CELL PHONE SOCKET 、 REAR CUSHION	17
4.PRE-RIDE INSPECTION	18
ADVANCE INSPECTION 、 ENGINE OIL LEVEL INSPECTION/REFILLING	18
FRONT LUGGAGE BOX	19
TIRE INSPECTION	20



TABLE OF CONTENTS

FUEL LEVEL INSPECTION/REFILLING	22
STEERING HANDLEBAR 、 INSTRUMENT LIGHTS INSPECTION	23
BRAKE FLUID LEVEL INSPECTION	24
BRAKE PAD WEAR 、 BRAKE SHOE WEAR	25
BRAKE LEVER FREE PLAY INSPECTION & ADJUSTMENT	26
HORN/LIGHT INSPECTION	28
FRONT/REAR SHOCK ABSORBER INSPECTION 、 BRAKE PERFORMANCE INSPECTION 、 BACK MIRROR ANGLE CHECK 、 LICENSE PLATE CHECK 、 REFLECTOR CHECK 、 PREVIOUS ABNORMAL PARTS INSPECTION 、 LUBRICATION POINT CHECK	29
5.ENGINE STARTING METHODS	30
6.NORMAL RIDING METHOD	33
7.PRECAUTIONS FOR RIDING	35
8.HOW TO STOP RIDING	39
9.EASY MAINTENANCE	41
AIR CLEANER CLEANING & REPLACEMENT	41
APPEARANCE CLEANING	43



TABLE OF CONTENTS

BATTERY	44
FUSE CHANGE	46
ENGINE OIL CHANGE	48
TRANSMISSION GEAR OIL	49
SPARK PLUG INSPECTION	50
BRAKE FLUID LEVEL INSPECTION/REFILLING 、 RUBBER COVER INSPECTION FOR WIRE AND CABLE	51
10.IMPORTANT NOTICES	52
POLLUTION-FREE PERIODIC MAINTENANCE SCHEDULE	53
SPECIFICATIONS	54
11.KYMCO CLEAN AIR SYSTEM (FOR EURO 2).....	56



1. PRECAUTIONS FOR A SAFE RIDING

(1) CLOTHES

To relax and wear comfortable clothes are the main points for a safe riding.

To observe traffic laws, keep a cool mind, relax and be careful will provide you a safe riding.


- (1) Wear helmet and fasten it tightly.
- (2) Have the clothes well-arranged. Fasten shirt cuffs and keep them from hooking the brake lever.
- (3) Wear low-heeled shoes for a safe riding.
- (4) When riding, use both hands to grasp the handlebar. it is very dangerous to hold the handlebar with one hand.

▲ CAUTION:

A scooter rider should not wear loose or too long clothes to avoid danger.


During riding or 10 minutes after the scooter is stopped, do not touch the exhaust muffler to avoid scalding.

When parking the scooter, keep it away from dry lawn or inflammables to avoid danger.

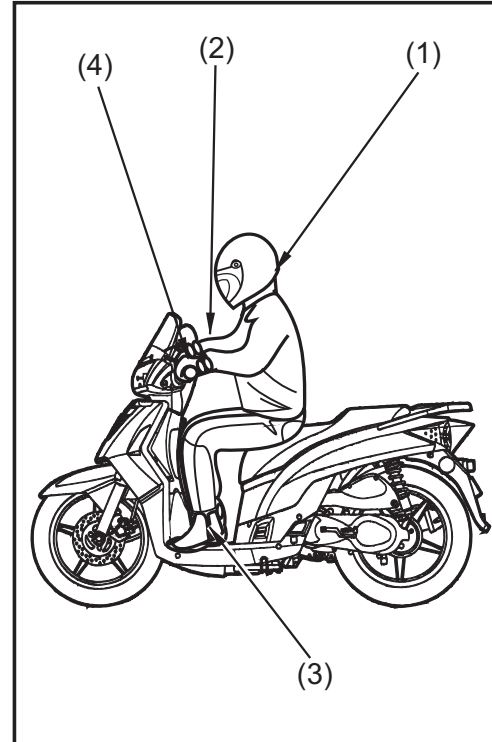

(2) RIDING METHOD


The safety of two-wheel vehicles is influenced by sitting position. The rider should sit on the central part of the seat cushion. If the rider sits on the rear part of the seat, the load of front wheel will decrease. As a result, the handlebar will swing and cause danger to the rider. When making a turn, it will be easier for the rider to steer the scooter by leaning the body inward slightly. The scooter will lose its balance if the rider fails to keep his body leaning inward. When riding on a damaged or macadam road. Slow down the speed and hold the handlebar tightly.

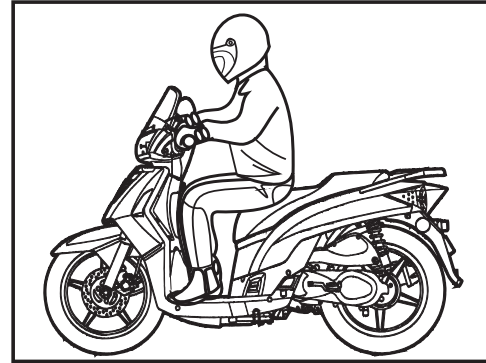

(3) CARRYING GOODS


Keep a good sitting posture to operate the scooter properly. The feel of the handlebar will be different when carrying goods on the scooter. Overloading may cause the handlebar to swing. Avoid riding with overload.

- (1) Max. Loading capacity of the met-in box is 10kg.
- (2) Max. Loading capacity of the rear carrier is 5kg.
- (3) Max. Loading capacity of the front luggage box is 1.5kg.

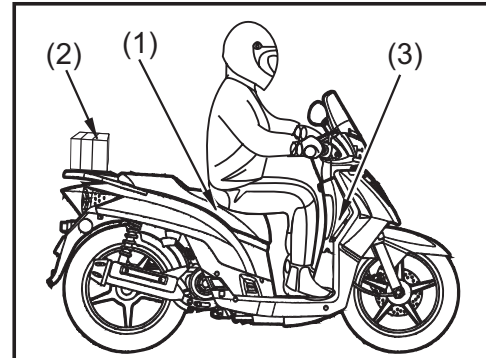


2. PARTS LOCATION


- (1) Headlight switch (P.9)/
Electric starter button (P.9)
- (2) Speedometer (P.13)
- (3) Main stand
- (4) Ignition switch (P.8)
- (5) Helmet holder (P.12)
- (6) Battery/Fuse (P.42/P.43)
- (7) Muffler
- (8) Front luggage box (P.17)

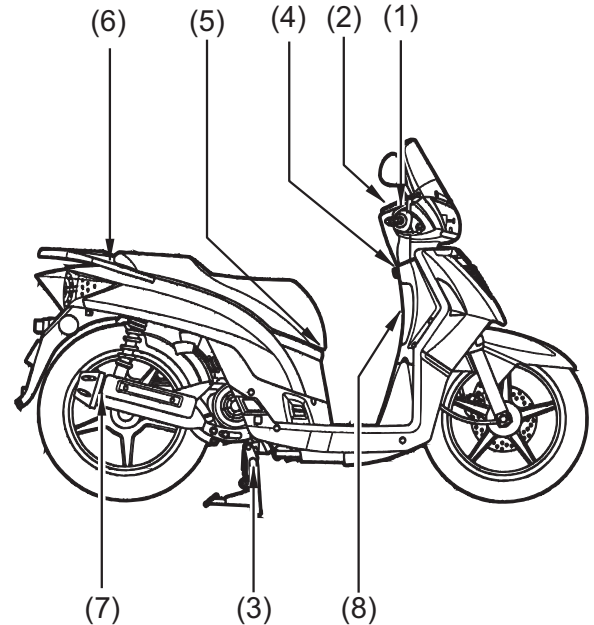

- (1) Seat lock (P.12)
- (2) Fuel fill cap (P.21)
- (3) Met-in box (P.12)
- (4) Helmet holder (P.12)
- (5) Center hook (P.17)
- (6) Side stand
- (7) Headlight dimmer switch (P.10)/
Passing signal switch (P.10)/
Turn signal switch (P.11)/
Horn button(P.11)
- (8) Kick starter pedal (P.31)
- (9) Air cleaner housing (P.39)

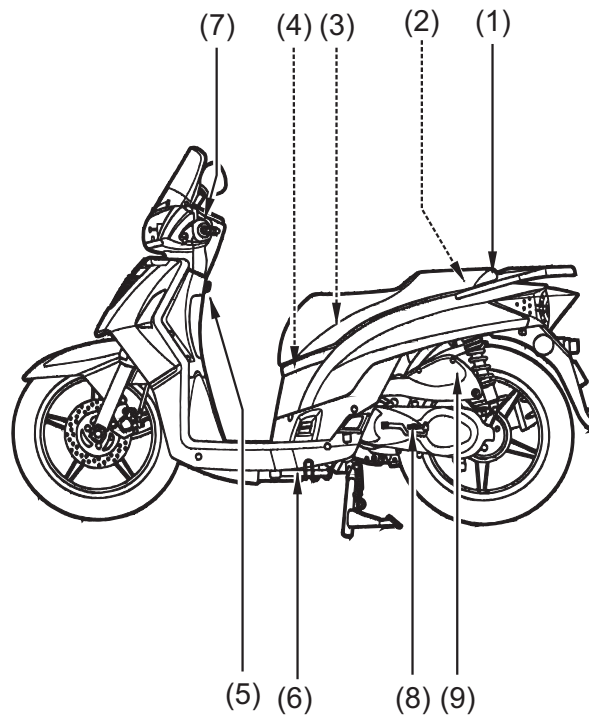


- (1) Headlight
- (2) Left back mirror
- (3) Rear brake lever
- (4) Left front turn signal light
- (5) Left front cushion
- (6) Right front cushion
- (7) Right front turn signal light
- (8) Front brake lever
- (9) Right back mirror

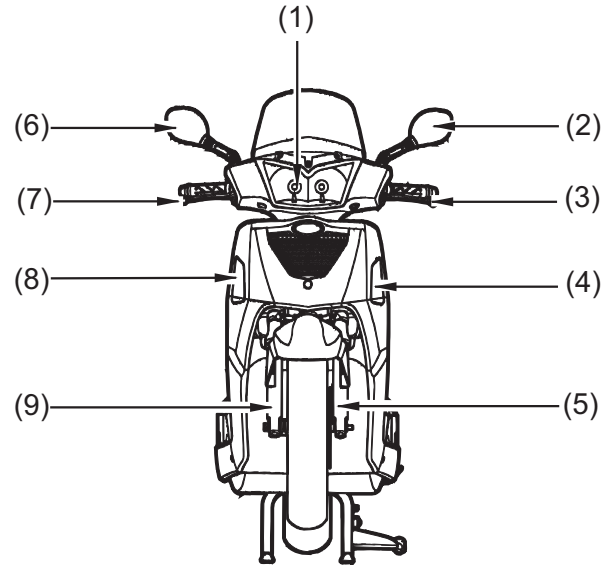

ENGINE NUMBER

The engine number is stamped on left engine case.
Please write down your engine number in place
below.


ENGINE NUMBER:

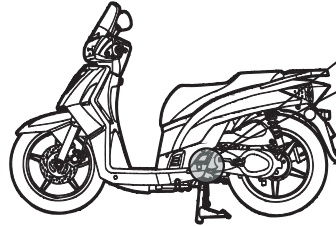

KEY NUMBER




The key number (1) will be needed when you order
replacement part. Record the number for your
reference.

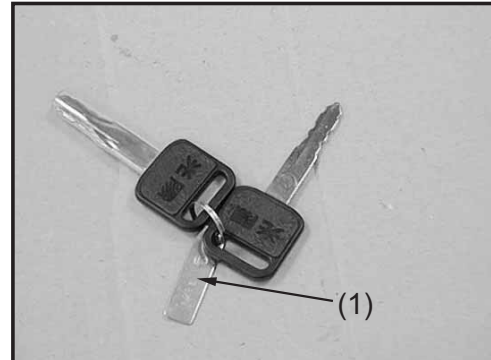KEY NUMBER:




3. OPERATION INSTRUCTIONS



(1) IGNITION SWITCH/STEERING HANDLEBAR LOCK

- ①  :At this position, power is connected to start the engine. The key cannot be taken out.
- ②  :At this position, power is cut off and the engine stops. The key can be taken out.
- ③  :At this position, the steering handlebar is locked. The key can be taken out.

《Locking Method》


Turn the steering handlebar left to the full and then push and turn the ignition switch key left to the "  " position, The handlebar can be locked.

《Unlocking Method》


Turn the ignition switch key right to the "  " and the "  " is released automatically.

▲ CAUTION:

After locking, turn the handlebar gently to make sure that it is locked.

Do not turn the ignition switch to the "  " position during riding, otherwise the handlebar will be out of control and cause accidents.

Don't park your motorcycle at a place to hinder the traffic.

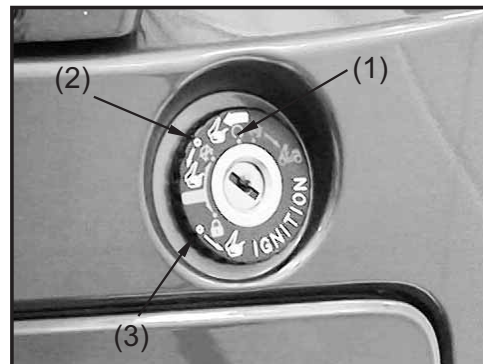

(2) ELECTRIC STARTER BUTTON "🔌"


- To start the engine, first turn on the ignition switch "🔌" and then push the electric starter button. At this time, be sure to fully apply the front or rear brake lever in order to connect the power.

⚠ CAUTION:

During engine running, do not push the electric starter button to avoid engine damage.


Turn the headlight switch off and turn signal switch off before using the electric starter button.

Release the electric starter button immediately after the engine is started.

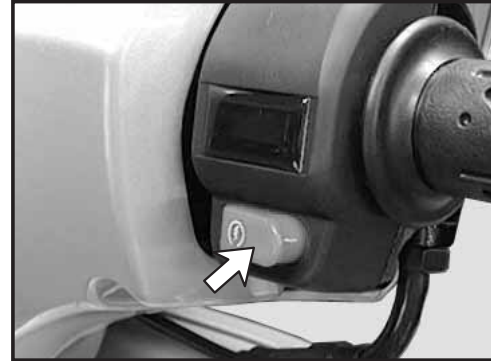



(3) HEADLIGHT SWITCH

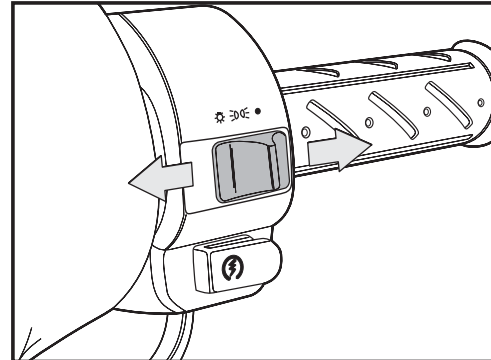- At this position, the position light, headlight, instrument lights and taillight turn off together.
 - ☰☒☒ At this position, the position light, instrument lights and taillight light turn on.
 - ☀ At this position, the position light, headlight, instrument lights and taillight light all turn on.
- * The headlight switch is not included in always lighting headlight scooter.





(4) HEADLIGHT DIMMER SWITCH/PASSING SIGNAL SWITCH

- (1)  Switch to this position for using high beam.
- (2)  When riding in downtown area or there is a car coming from the opposite direction, use low beam to avoid affecting the visibility of coming cars.

CAUTION:

This indicator light comes on when the long distance light is turned on.

PASSING When passing, if there are cars coming from the opposite direction, press and release the **PASSING** switch and the headlight will wink to warn the coming cars.

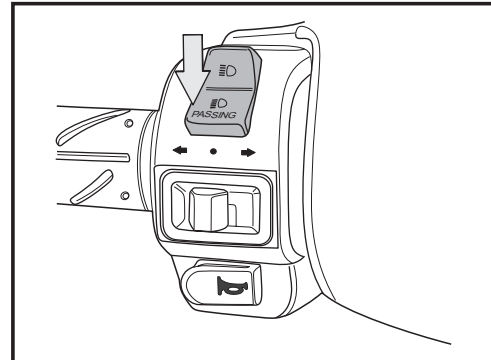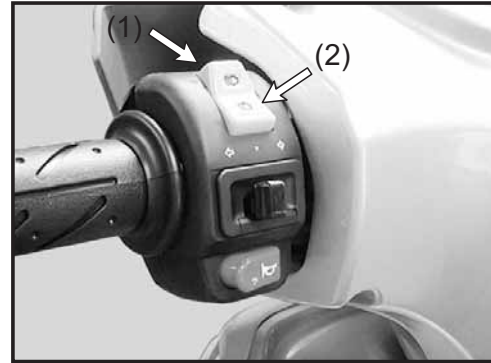


(5) HORN BUTTON "📣"/TURN SIGNAL SWITCH

When the ignition switch key is turned the "ON" position, push the horn button and it will sound.

Move the turn signal switch to (1) ➡ For turning to the right. (2) ⬅ For turning to the left. (3) Push the turn signal switch button to release it.

(4) Horn Button

The horn and turn signal switch do not work when the ignition switch is the "OFF"

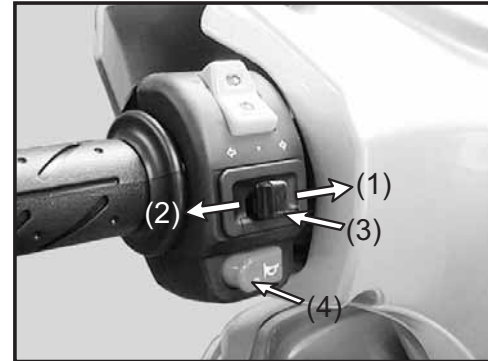

▲ CAUTION:

The turn signal light will not release automatically.
Be sure to reset it after use; otherwise it may affect the traffic safety.

(6) SEAT LOCK/MET-IN BOX

Unlock the seat and put the helmet in the MET-IN box.

《Unlocking Method》

- ① Stop the engine and turn the ignition switch to the "OFF" position. Turn the key left to unlock the seat.
- ② If the engine is running. Keep the ignition switch key at the "ON" position and also push it left to unlock the seat.
- ③ Handlebar is locked. "L" Turn the key left to unlock the seat.

To lock the seat, push on it until it lock automatically.

Make sure the seat is secure before riding.

▲ CAUTION:


Never put the key inside the seat cushion to lock the seat.

(7) HELMET BUCKLE

1. Open the seat with the ignition switch key and lift up the seat.
 2. Put the helmet retaining ring into the helmet buckle.
 3. Put down the seat and it will lock automatically.
- Take out the helmet in the reserve order of the above steps.


▲ CAUTION:

When riding, wear the helmet and do not retain it on the scooter; the helmet may interfere with safe operation and result in loss of control.

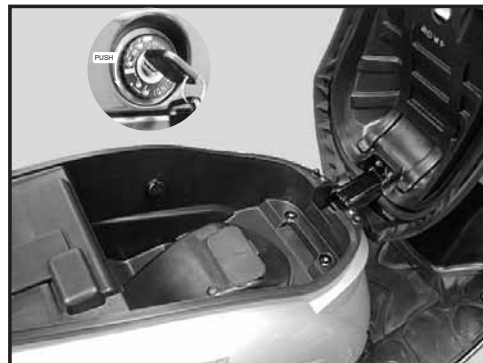


(8) INSTRUMENTS AND INDICATORS

- (1) **FUEL GAUGE:** The fuel gauge is to show the volume of gasoline in the fuel tank. If the fuel gauge pointer is at the "E" area, the fuel is insufficient. Refill 92# or 95# nonleaded gasoline as early as possible.
- (2) **SPEEDOMETER (km/hour):** The riding speed is indicated by km/hour.
- (3) **SPEEDOMETER (mph):** The riding speed is indicated by mph.
- (4) **ODOMETER:** The total riding mileage is indicated by kilometer.
- (5) **CLOCK METER:** It displays time which can be adjusted manually.
- (6) **ADJUST KEY:** They are used to correct time and set the odometer.

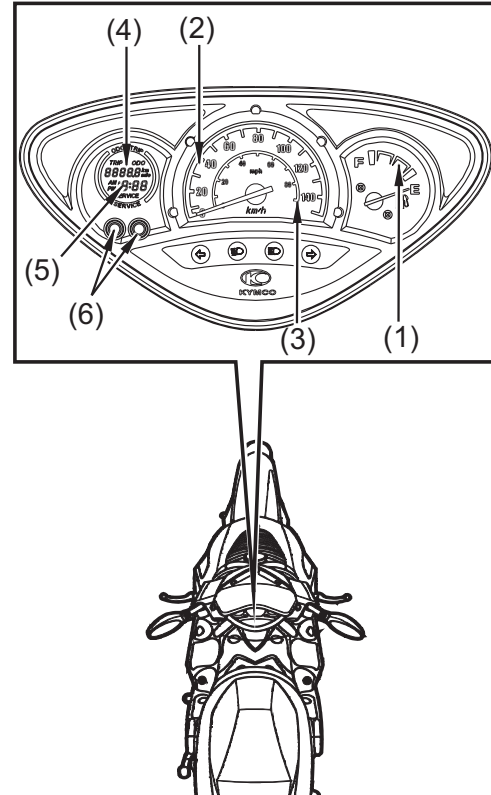


- (7) TURN SIGNAL INDICATOR LIGHT(LEFT): When the turn signal switch is operated, this indicator light will wink.
- (8) HIGH BEAM INDICATOR LIGHT: This indicator light comes on when the long distance light is turned on.
- (9) LOW BEAM INDICATOR LIGHT: This indicator light comes on when the short distance light is turned on.
- (10) TURN SIGNAL INDICATOR LIGHT(RIGHT): When the turn signal switch is operated, this indicator light will wink.

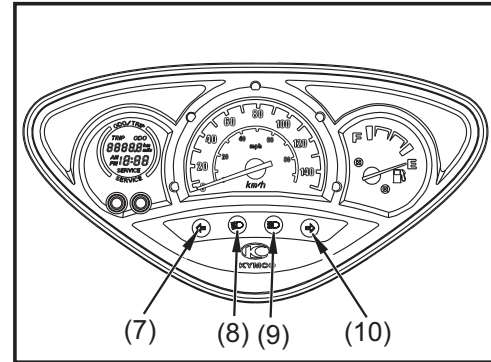

Operation Instruction for Multi-meter


Button B(mode)

Button A(adjustment)

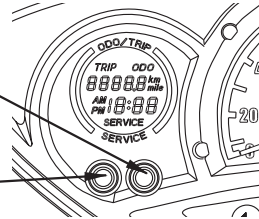


(1)

Press and hold button A
until 2 seconds:
shift the unit mph or km/h

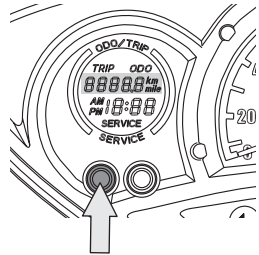


(2)

Press and hold button B
until 2 seconds:
shift function to ODO or TRIP

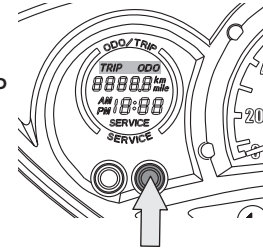


(3)

Press and hold button B
until 5 seconds:
service mode selection.
After above procedure,
please to press and hold
button B until 2 seconds to
turn back mode ODO / TRIP
function.

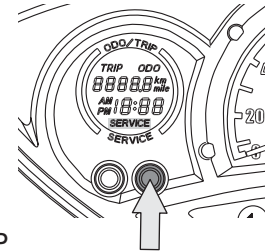


(4)Service Rese:

Press and hold button A and B until 2 seconds simultaneously to reset to zero when at service function.

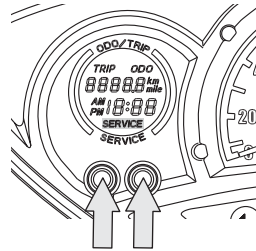

(5)Trip Rese:

Press and hold button A and B until 2 seconds simultaneously to reset to zero when at trip function.

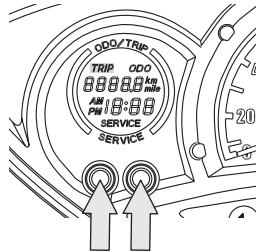


(6)Time adjustment:

Press and hold button A and B until 2 seconds simultaneously to adjust time when at ODO function.

Then the hour display will start flashing, press button B to adjust hour.

Then press button A, the minute display will start flashing, press button B to adjust minute.


Press the button A and B simultaneously to end the time adjustment.

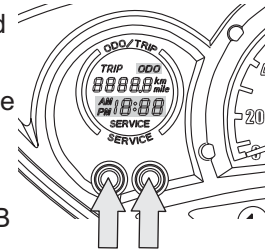

(7)Engine oil replacement:

At ODO function, the service indicator would start flashing when running 2000 km.

After engine oil replacement, the service function need to reset.(see item 3 and 4)

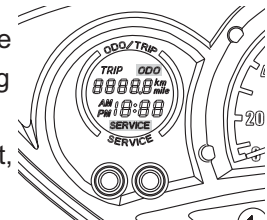

(9) CELL PHONE SOCKET


Open the seat then insert the cell phone charger wire into the socket.

▲ CAUTION:

Please close the protective cover of socket while it won't be used.

The cell phone socket only supply power. It can't be cut off the power supply automatically when the cell phone achieved enough power.

To avoid the cell phone overcharged, please follow all of the cell phone charger manufacturer's instruments.

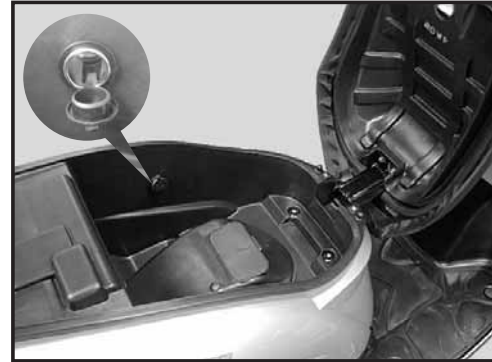

(10) REAR CUSHION

To suit scooter behavior to load condition rear cushion could be adjusted in spring position.

Using the special tool changed the spring position.

When you are adjust rear cushion, the spring position of rear cushions on the other side must be the same.

It is possible adjust rear cushion in three positions as follows:

- ① " hard " position
- ② " medium " position
- ③ " soft " position




4. PRE-RIDE INSPECTION

(1) ADVANCE INSPECTION

Get into a good habit of inspection before riding. For the sake of safety and to prevent vehicle damage and traffic accidents, the pre-ride inspection is absolutely required.

▲ CAUTION:

Be sure to perform inspection and maintenance for your new scooter after it is ridden for 300km.

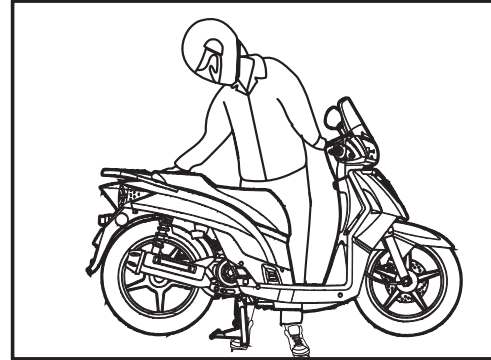

(2) ENGINE OIL LEVEL INSPECTION/REFILLING

Place the motorcycle on its main stand. Take out the oil dipstick and wipe it clean.

Directly insert the oil dipstick into the engine oil.

(Don't screw it in.)

Take out the oil dipstick and check the oil level. If it is close to the lower limit, add engine oil to the upper limit.

▲ CAUTION:

The temperature of engine and exhaust muffler is very high. When checking the oil level, be careful to avoid scalding.

Riding with insufficient engine oil will cause breakdown easily.



(3) FRONT LUGGAGE BOX

(Unlocking Method)

Turn the ignition key directly from the "⊗" to the "🏍️" position, then open the luggage box cover automatically.

(Locking Method)

Push up the luggage box cover and press it up to make it lock automatically. Then slightly pull down the luggage box cover to make sure that it is locked.

▲ CAUTION:

Maximal loading capacity of the front luggage box is 1.5kg.



(4) TIRE INSPECTION

1. Tire Pressure Check


Check if the tire pressure is normal when the tire is in contact with level ground.

If there is any abnormal condition, check the tire pressure with a tire pressure gauge.

Measure the tire pressure under room temperature.

The tire pressure must not overpass $2.50\text{kg}/\text{cm}^2$

NORMAL PRESSURE(1 Rider / 2 Riders)	
Front Wheel	1.5/1.75 kgf/cm^2
Rear Wheel	2.0/2.25 kgf/cm^2

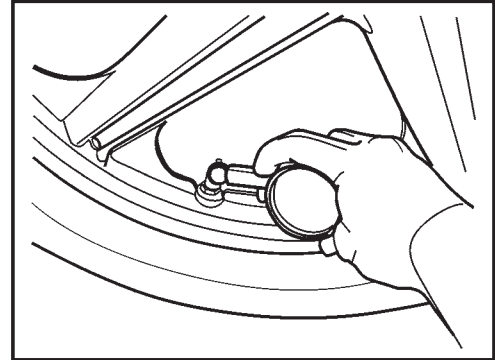

2. Cracks & damage

Check the tire-contact area for crack or damage.

3. Abnormal wear

Check the tire-contact area for abnormal wear.

4. Foreign objects of metal piece & gravel

Check the tires and tire-contact area for imbedded objects of metal piece and gravel.


5. Depth of tire groove

If the tire is worn to the wear limit indication mark, Replace it with a new one.

▲ CAUTION:

Abnormal tire pressure, crack, damage and abnormal wear will cause unsteady handlebar and result in tire break.

If the tire has cracks or is worn to the wear limit indication mark, replace it with a new one.

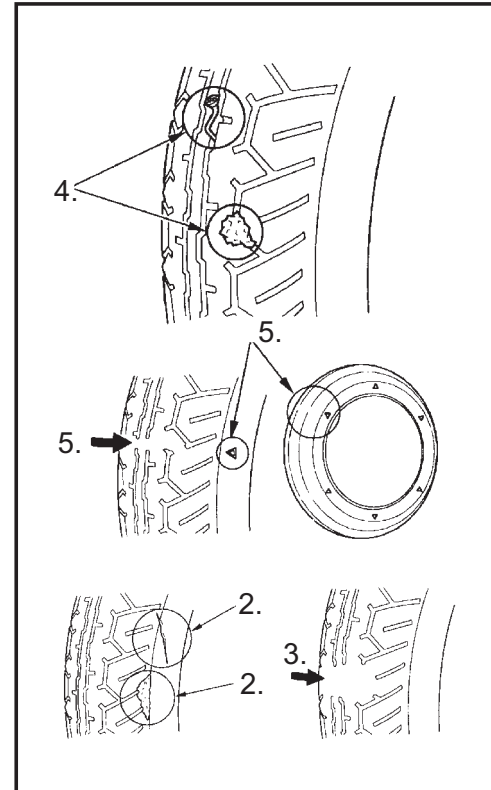

(5) FUEL LEVEL INSPECTION/REFILLING

Check if the fuel is sufficient.

If the fuel gauge pointer is at red grid, refill #92 or #95 nonleaded gasoline as soon as possible.

《Refilling Method》

1. Open the seat with the ignition switch key. (Refer to P8)
2. Turn the tank cap counterclockwise with hand to open the cap.
3. Use only #92 or #95 nonleaded gasoline.
4. Turn the fuel tank cap clockwise to tighten it.
5. Close the fuel tank cap in the reverse order of opening.

(1)Unlock

(2)Lock

▲ CAUTION:

Be sure to stop the engine before refilling.


The gasoline level shall not exceed the reference plate; otherwise the fuel will penetrate out.

When refilling, do not add other additives to avoid engine breakdown.




(6) STEERING HANDLEBAR

Visually inspect the steering handlebar for damage.
Apply the front brake and move the handlebar upward and downward to check for abnormal noise.
Move the steering handlebar upward, downward, rightward and leftward to check for any loose parts.
Check if the handlebar rotates freely.
If any abnormal condition is found, go to your scooterer dealer or for inspection.

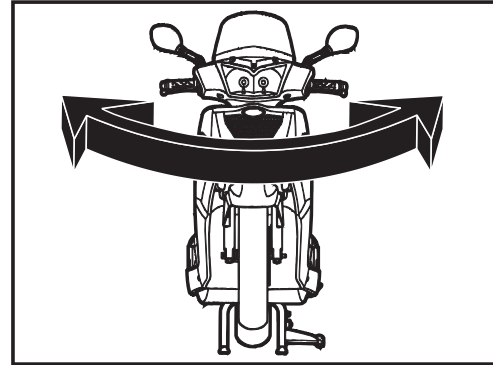

(7) INSTRUMENT LIGHTS INSPECTION

Check the turn signal indicator lights and high beam indicator light for proper operation.
Check the speedometer for proper operation.
Check the fuel gauge for proper operation.
Check the low oil level indicator light for proper operation.
The indicator of speedometer will run from zero to maxi speed then return to zero when the ignition switch turn on. It just check the working condition of speedometer only.

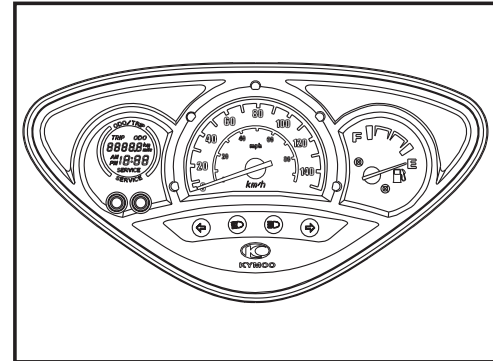

(8) BRAKE FLUID LEVEL INSPECTION

Check if the fluid level is below the lower level mark through the inspection window.


▲ CAUTION:

As the brake pads wear, brake fluid level drops, automatically compensating for wear. There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks.

If the brake lever travel become excessive and the brake pads are not worn beyond the recommended limit, There is probably air in the brake system and it must be bled. See your authorized KYMCO dealer for this service.


To prevent damage to the brake system, use only fluid from a sealed container. Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.

Brake fluid can damage paint and plastic, so handle the fluid with care. When adding brake fluid, be sure the reservoir is horizontal before removing the cover to prevent accidental spilling. Use only DOT 4 brake fluid from a sealed container.

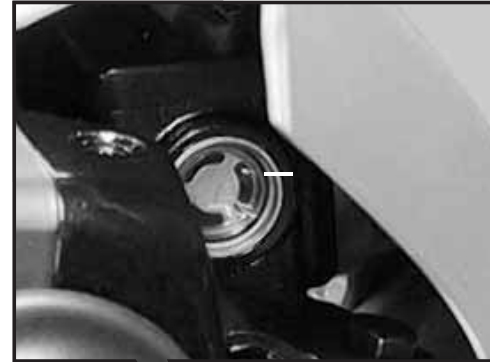


(9) BRAKE PAD WEAR

Check the wear indicator mark on each pad.
If either pad is worn to the wear indicator mark, replace both pads as a set. See your authorized KYMCO dealer for this service.

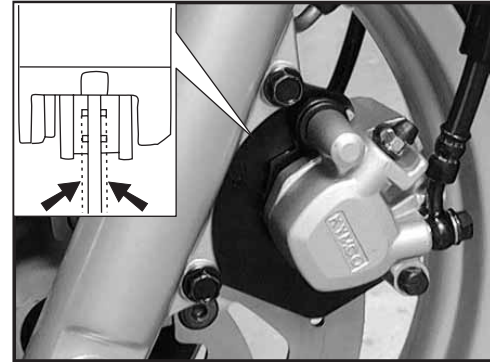

(10) BRAKE SHOE WEAR

The rear brake is equipped with a brake wear indicator.
When the brake is applied, an arrow mark (1) attached to the brake arm moves toward a reference mark (2) on the brake panel. If the arrow mark aligns with the reference mark on full application of the brake, the brake shoes must be replaced. See your authorized KYMCO dealer for this service.

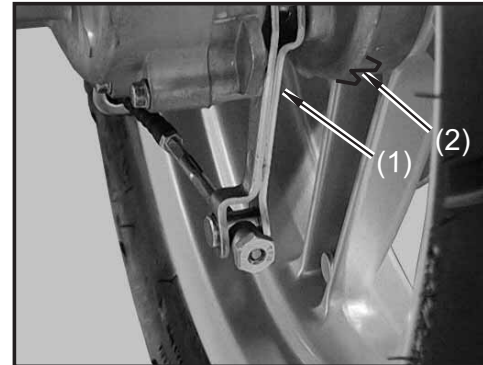


(11) BRAKE LEVER FREE PLAY INSPECTION & ADJUSTMENT


The rear brake lever free play should be adjusted to 10~20mm (0.4~0.8 in) at the tip of the brake lever. If the free play is incorrect, adjust as follows:

Place the scooter on its main stand.

Turn the adjusting nut in direction (A) to decrease play, and in direction (B) to increase play.

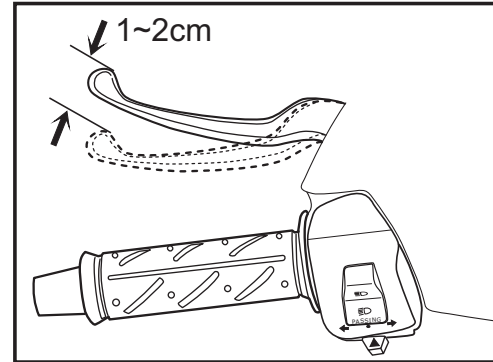


Turn the adjusting nut on the brake hub in direction (A) to decrease play, and in direction (B) to increase play.

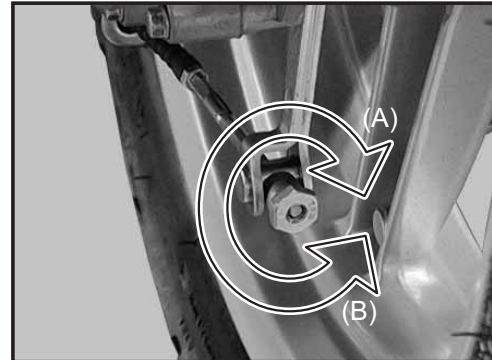

▲ CAUTION:

Make sure the cut-out on the adjusting nut (2) is seated on the brake arm pin (1) after making final free play adjustment.

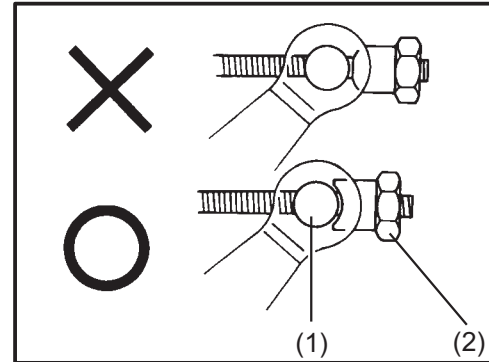

(12) HORN/LIGHTS INSPECTION

Turn the ignition switch to the "ON" position and push the horn button to check if it sounds.

Headlight/Taillight Inspection:

Start the engine and turn on the headlight switch to check if the headlight and taillight are good and check the light shells for dirt and damage.

Stoplight Inspection:

Apply the front and rear brake levers respectively to check if the stoplight is good. And also check the stop light shell for dirt and damage.


Turn Signal Light Inspection:

Operate the turn signal switch to make sure whether the right/left front and rear turn signal lights can wink and buzz. Also check the light shells for dirt and damage.

(1)Headlight (2)Taillight/ Stoplight (3)Turn signal light
(4)Horn button

▲ CAUTION:

Replace any dirty or damaged lights with new ones to avoid danger during riding.

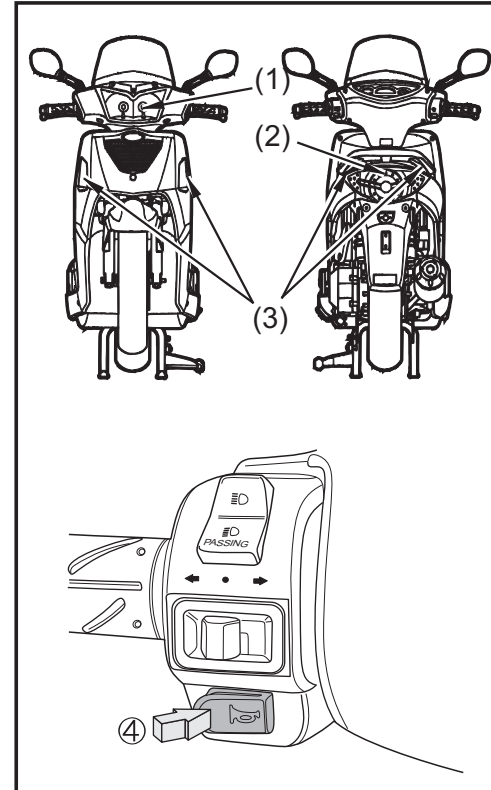

(13) FRONT/REAR SHOCK ABSORBER INSPECTION

Check the condition of the front/rear shock absorbers by pressing down on the handlebar and seat several times.

(14) BRAKE PERFORMANCE INSPECTION

Fully apply the front and rear brake levers and move the scooter forward to see if the braking effect is good.

(15) BACK MIRROR ANGLE CHECK

Sit on the scooter uprightly and make a viewing test of the rear mirror angle.

(16) LICENSE PLATE CHECK

Check the license plate for dirt and damage, then tighten it.

(17) REFLECTOR CHECK


Check the reflector for dirt and damage.

(18) PREVIOUS ABNORMAL PARTS INSPECTION

Make sure that the previous abnormal parts are repaired.


(19) LUBRICATION POINT CHECK

Visually check if all motorcycle lubrication points are lubricated properly.

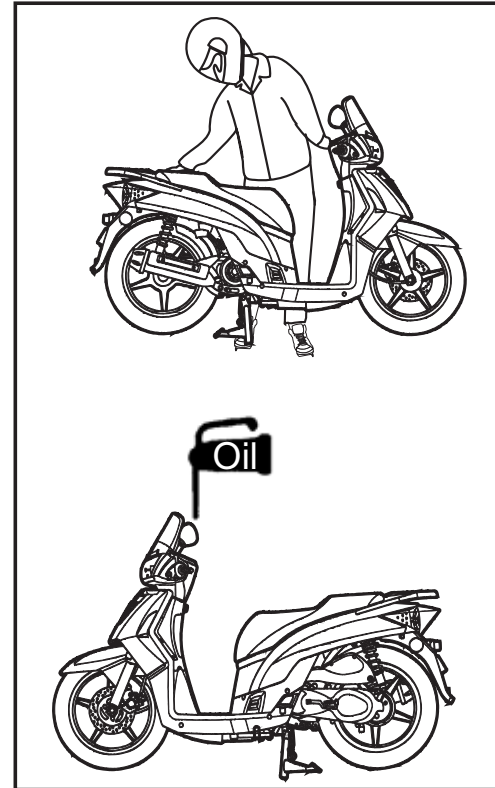

5. ENGINE STARTING METHODS

(1) TURN THE IGNITION SWITCH "ON"

Unlock the steering handlebar.
Turn the ignition switch to the "  " position.

▲ CAUTION:

Check the gasoline volume and engine oil level before starting the engine.

Be sure to erect the main stand while starting the engine and side stand is up.

Before starting the engine, the side stand shall be kicked up to secure safety.




(2) LOCK THE REAR WHEEL

Apply the brake lever to connect the power for starting.

▲ CAUTION:

In order to prevent the scooter from rushing out at high speed, make sure to lock the rear wheel.

If free play of the rear brake lever is incorrect, the rear wheel cannot be braked and it will cause danger easily.

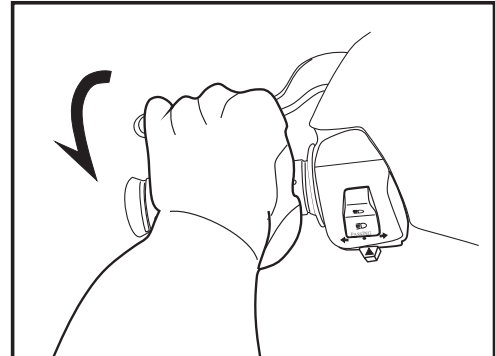

(3) USE THE ELECTRIC STARTER BUTTON

Push the electric starter button without rotating the throttle grip.

If the engine fails to start after the electric starter button is pressed for 3~4 seconds when it is warm, rotate the throttle grip for $1/8 \sim 1/4$ turn to facilitate starting.

When the scooter is not used for a long time or the fuel tank is empty, if the engine is still hard to start after the fuel tank is refilled with gasoline, slightly turn the throttle grip and push the electric starter button for several times to start the engine.


In order to avoid battery overcharge, do not push the starter button more than 5 seconds.

If the engine does not start after the electric starter button is pushed for 5 seconds, wait for more than 5 seconds and then push the button again.

▲ CAUTION:

Don't push the electric starter button while the engine is running; otherwise the engine will be damaged.

When starting the engine, the rear brake lever must be applied to connect power and the stoplight will come on when power is connected.

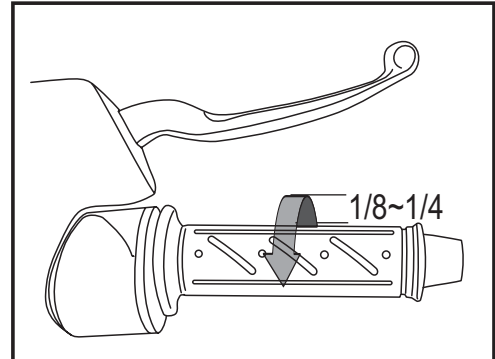

(4) START WITH THE KICK PEDAL

1. Place the scooter on its main stand on level ground.
2. Depress the kick pedal with force.

When the engine is cold and does not start after the kick pedal is depressed for 3~4 times, rotate the throttle grip for $1/8 \sim 1/4$ turn to facilitate starting.

Warm up the engine for a little while (about 2~3 minutes) after cold start.



After the engine is started, do not accelerate suddenly and keep riding at low speed to prolong the engine service life.

▲ CAUTION:

After the engine is started, the kick pedal must be returned to its original position.

The exhaust contains poisonous carbon monoxide which is harmful to human body. Never run the engine in a closed area.

Turn off all light switches before starting the scooter.

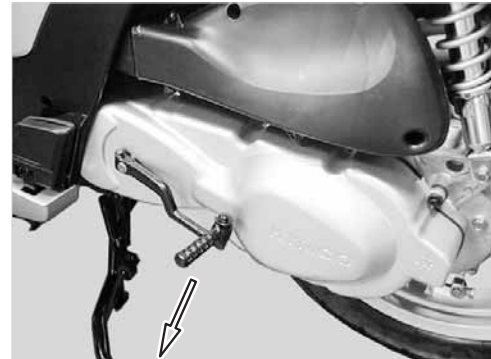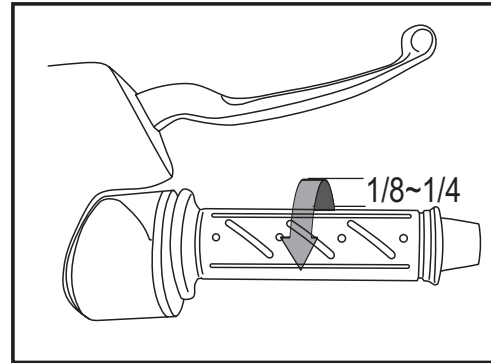

6. NORMAL RIDING METHOD

(1) STARTING THE ENGINE

Start the engine by referring to the starting methods specified in Section 5.

▲ CAUTION:

Keep your finger away from the button immediately after the engine is started to avoid engine damage. The rear brake lever should be kept at the braking position before riding.




(2) REBOUND THE MAIN STAND

Keep the rear brake lever at braking position and push the scooter forward, then the main stand will rebound automatically.

▲ CAUTION:

After starting the engine and before moving, do not turn the throttle grip to increase the engine rpm.

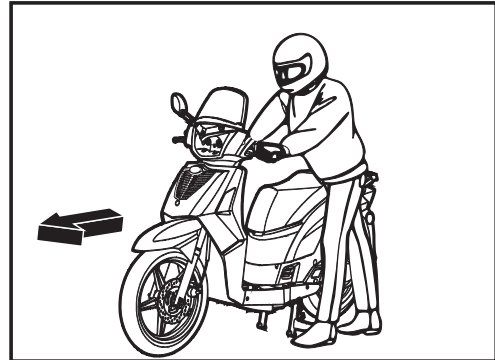


(3) CORRECT SITTING POSITION

Ride astride on the scooter from the left side and sit upright. Touch the ground with left foot to avoid slipping.

▲ CAUTION:

The rider must wear helmet, gloves and goggles.
Do not wear any clothes which will affect riding safety.

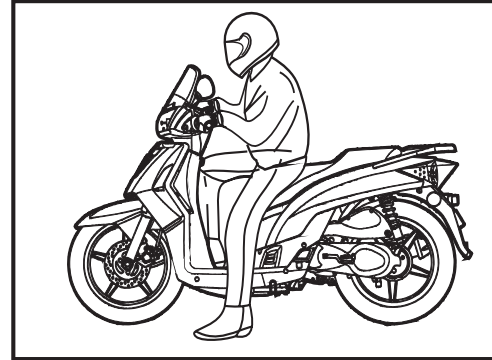


(4) ROTATE THE THROTTLE GRIP

Release the rear brake lever and slowly rotate the throttle grip, then the scooter will move smoothly.

▲ CAUTION:

After the rear wheel brake lever is released, do not rotate the throttle grip suddenly to prevent the scooter from rushing out.
During riding, do not accelerate or decelerate rapidly and suddenly to save fuel and prolong the scooter life.

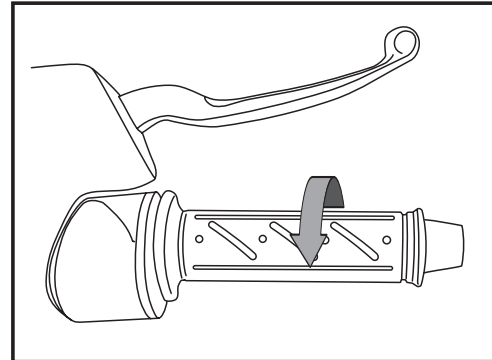

7. PRECAUTIONS FOR RIDING


(1) CORRECT RIDING

Before moving, turn on the turn signal light and make sure whether the rear side is safe.

Do not rush into the car lanes and always keep the scooter to the right side to avoid danger.

▲ CAUTION:

Moderate riding will prolong the engine service life. The clutch linings are worn more quickly when often ridden at low speed.

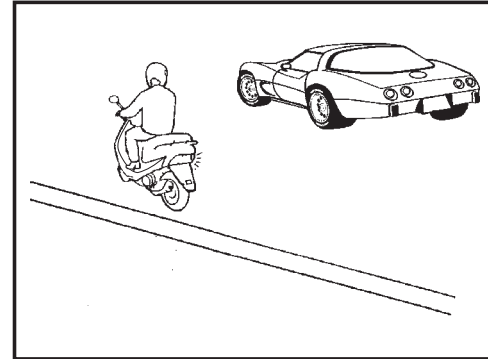

(2) SPEED CONTROL

The speed is controlled by the throttle grip.

(1) ROTATE:

The speed will become faster. Don't be hasty to accelerate.


When riding on an ascending road, rotate the throttle grip gradually to increase the horse power.

(2) RESTORE:

The speed will become slower. Restore the throttle grip quickly.

▲ CAUTION:

Apply the brake level while restoring the throttle grip. This will shorten the time required to slow down.

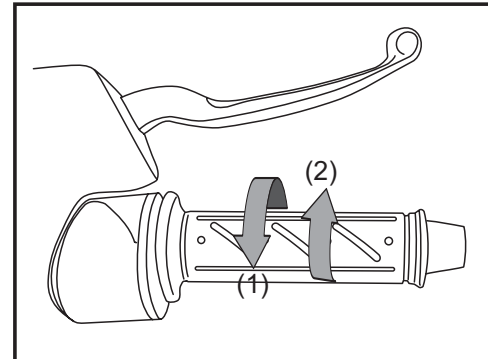

(3) PROPER RIDING WILL PROLONG THE ENGINE LIFE


For a new scooter, keep the speed below 40km per hour within the first 1000km of riding.

Avoid sudden acceleration and long-time riding at high speed.

In hot weather, the engine overheats easily at long-time idling. Stop the engine in this case.

▲ CAUTION:

Moderate riding will prolong the engine life.

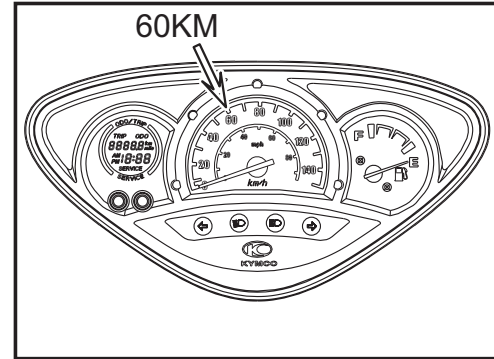


(4) APPLY BOTH FRONT AND REAR BRAKE LEVELS WHEN BRAKING

First restore the throttle grip to the closed position and then pull the brake levers tight.

The best way to brake the scooter is to pull the brake levers "slowly" at the beginning, then pull them tight.

▲ CAUTION:

Apply single brake lever will cause the scooter to slip. During riding, never brake the scooter suddenly. It may cause the scooter to slip and could be very dangerous.

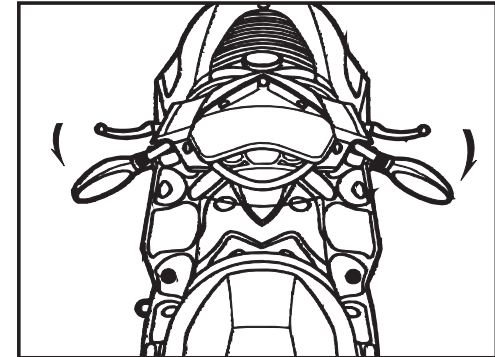


(5) DO NOT MAKE SUDDEN STOP OR SHARP TURN

Sudden stop and sharp turn are the main causes for slipping and could be very dangerous.

In rainy days the road is slippery. Sudden stop will cause the scooter to slip. Be careful to avoid danger.

When approaching a corner or turn, close the throttle fully, and slow the scooter down by applying both front and rear brakes at the same time.

After completing the turn, open the throttle gradually to accelerate the scooter.

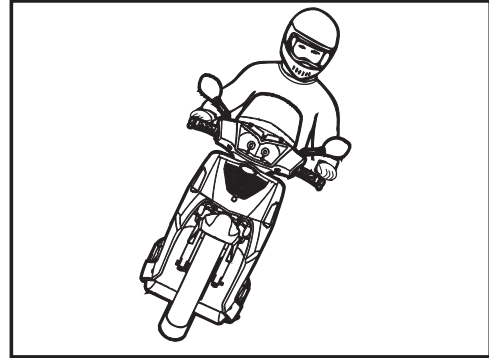


(6) BE MORE CAREFUL WHILE RIDING IN RAINY DAYS

A longer braking distance is required in rainy days than in sunny days. Be sure to slow down and brake the scooter slowly as soon as possible.

When riding on a descending road, restore the throttle grip to closed position and slow down by making intermittent braking.

▲ CAUTION:

A longer braking distance is required in rainy days. Be sure to slow down and brake the scooter slowly as soon as possible.

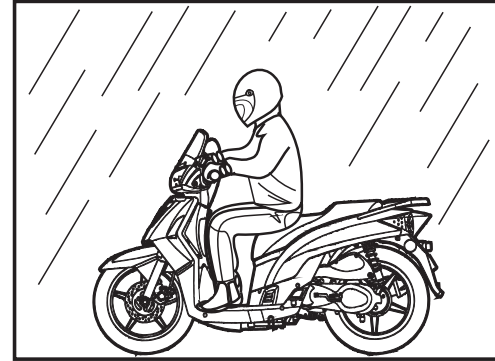


8. HOW TO STOP RIDING

(1) WHILE GO NEAR THE PARKING PLACE

Turn on the turn signal light in advance. Watch out vehicles coming behind or aside and stop the scooter to the right side slowly.

Restore the throttle grip to closed position and apply the front and rear brake levels as soon as possible. At this moment, the stoplight will come on to warn the vehicles coming behind.

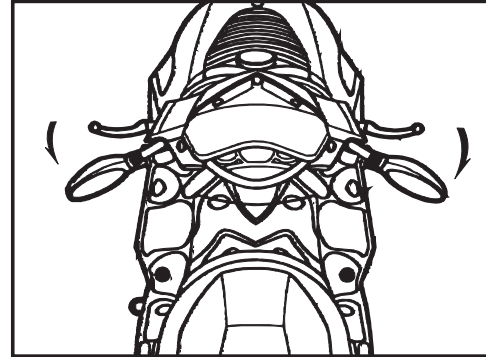


(2) WHILE THE SCOOTER IS COMPLETELY STOPPED

Return the turn signal switch to its original position. Turn the ignition switch key to the "OFF" position to stop the engine.

▲ CAUTION:

During riding, never operate the ignition switch key. When the ignition switch key is turned to the "OFF" position, the electric system does not work which may result in traffic accident. Turn off the ignition switch key after the scooter is fully stopped.

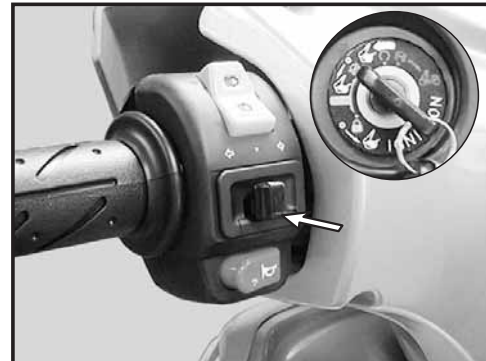


(3) PARKING

Place the scooter on its main stand on level ground and do not hinder the traffic.

Stand on the left side and grip the handlebar straight with left hand and the side rod or rear carrier with right hand. Then, step down the main stand evenly with right foot and pull the scooter backward by force with right hand.

▲ CAUTION:

The scooter may easily fall down if it is parked on an uneven ground.

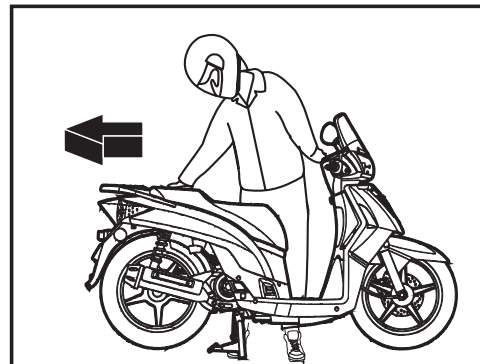

(4) HANDLEBAR


After parking, be sure to lock the steering handlebar and take out the key to prevent pilferage. (Refer to P.9)

▲ CAUTION:

Don't park your scooter at a place to hinder the traffic.

The temperature of engine and exhaust muffler is very high. Be careful to avoid scalding.


Park the scooter at a safe place and be sure to take out the key to prevent pilferage.

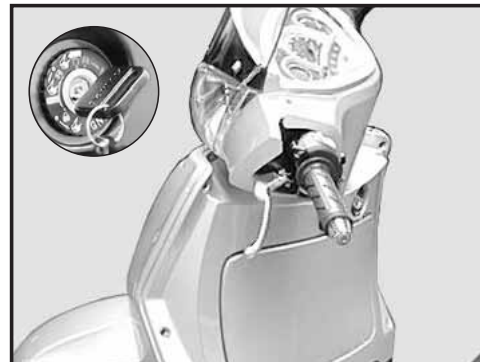


9. EASY MAINTENANCE

(1) AIR CLEANER CLEANING & REPLACEMENT

1.Remove the air filter case cover by removing the 6 screws.

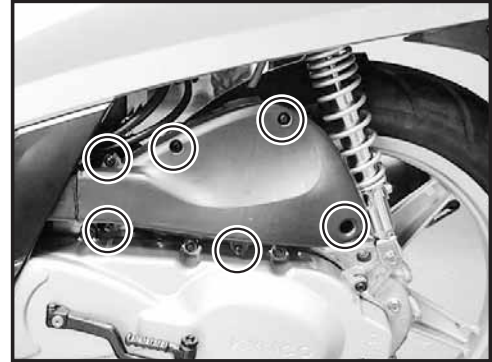

2.Remove the air cleaner (1).

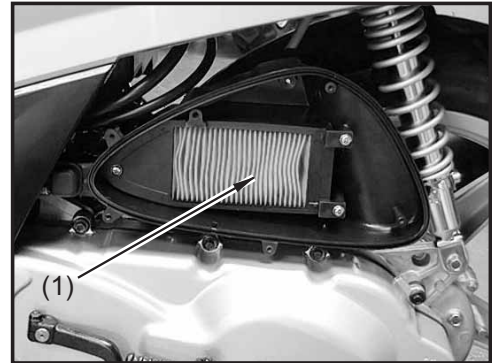


Clean the air cleaner element with compressed air.
Replace the air cleaner element at every 4000km.
The air cleaner requires more frequent cleaning or replacing when ridden in unusually dusty areas. When replacing, refer to P50 Periodic Inspection & Maintenance Schedule.

▲ CAUTION:

Never use oil or solvent to wash the wet type paper element.

Be careful not to allow water to enter the air cleaner; otherwise it may result in hard starting.

If the air cleaner is not installed properly, dust may be sucked into the cylinder directly to reduce engine horsepower and affect the engine life.

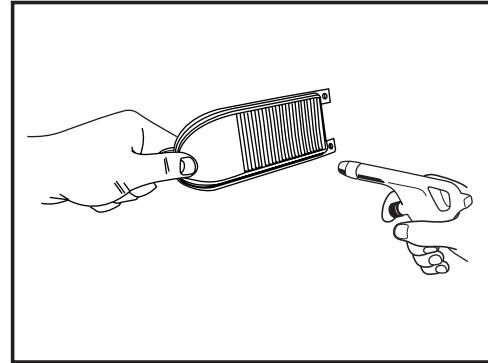


(2) APPEARANCE CLEANING

Often wipe clean the scooter appearance to prevent accumulated dust affecting the function of components.

▲ CAUTION:

If a scooter is not used for a long time, check the operation of each part and replace lubricants before riding. Ride the scooter only after its performance is confirmed.



When waxing the scooter, make sure that the ingredients of the wax will not damage the paint of the scooter.

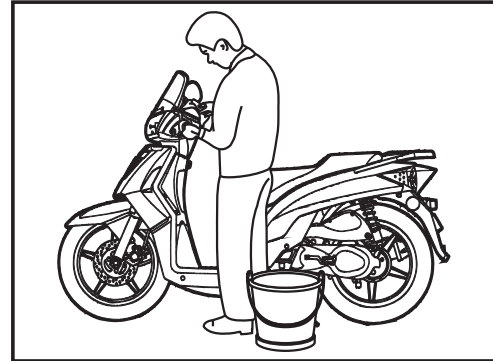

(3) BATTERY

Battery remove

1. Make sure the ignition switch is OFF.
2. Remove two screws (1).
3. Remove the battery cover (2).
4. Disconnect the negative (-) terminal lead (1) from the battery first, then disconnect the positive (+) terminal lead (2).
5. Remove the battery.

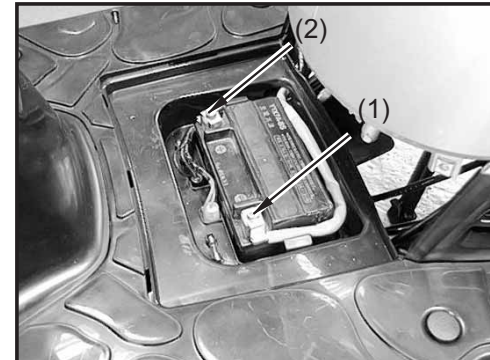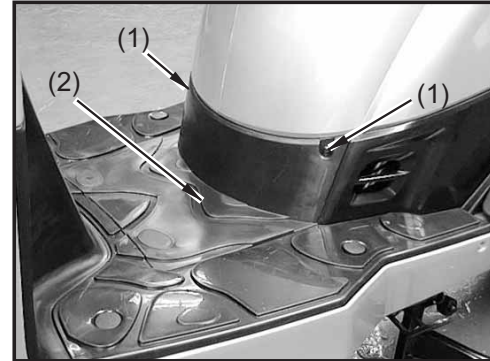

This model adopts the battery which needs no refilling of distilled water.

When cleaning the terminals, remove the screws attaching the battery cover on the panel-foot and then open the battery cover.

When battery terminals are corroded, take out the battery for cleaning.

After cleaning, apply a thin coat of grease or vaseline to battery terminals and then install the battery.

▲ CAUTION:

Never open the closed-type battery electrolyte cap.

If the scooter will not be used for a long time, the battery will discharge electricity by itself. Remove the battery and put it in a cool place after it is fully charged to prevent electricity leakage.



If the scooter will not be used for a long time, remove the negative (-) terminal.

Do not smoke or allow flames or sparks near the battery while removing and installing it.

Turn off the ignition switch before removal or installation.

The negative (-) terminal shall be removed first and the positive (+) terminal shall be installed first.

Tighten the loose terminal nuts securely.

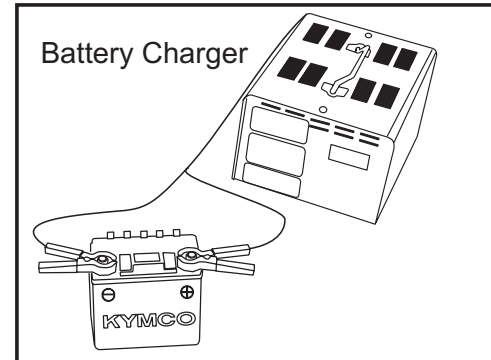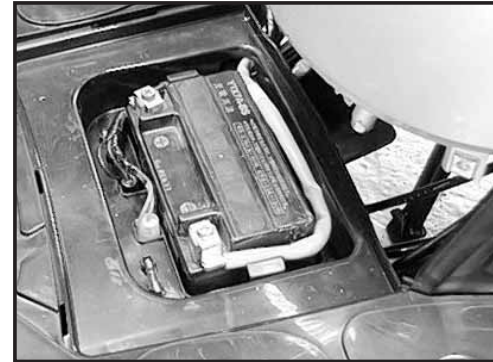

(4) FUSE REPLACEMENT

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized KYMCO dealer for repair.

(1) Charge system fuse specification: 15A

(2) Ignition switch fuse specification: 10A



The spare fuse (3) is on the battery compartment.

▲ CAUTION:

To prevent accidental short-circuiting, turn off the ignition switch before checking or replacing a fuse.

Fuse replace:

1. Remove the battery cover, by removing the screw.
(See page 44)
2. Open the fuse holders (1) and lift out the fuse with the clips (2).
3. Slide the old fuse out of the clips and discard it.

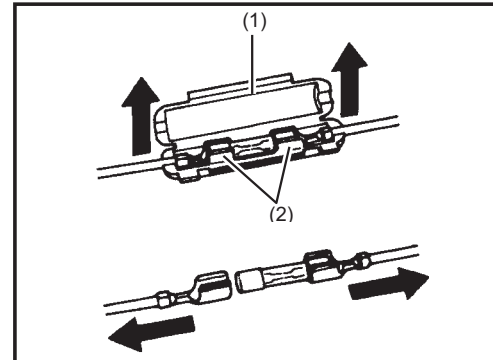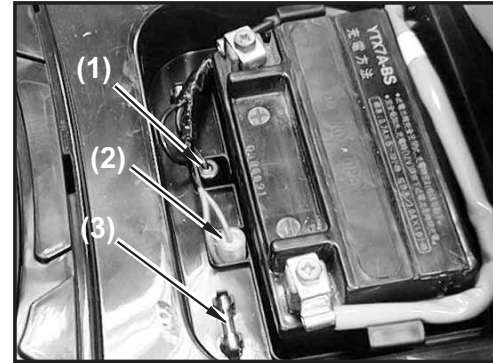


4. Slide the clips (2) onto the ends of the new fuse, push them back into the fuse holder (1), and close the fuse holder.

The spare fuse is on the battery compartment.

▲ CAUTION:

Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.

After replacing the fuse, be sure return the fuse holder to its original location

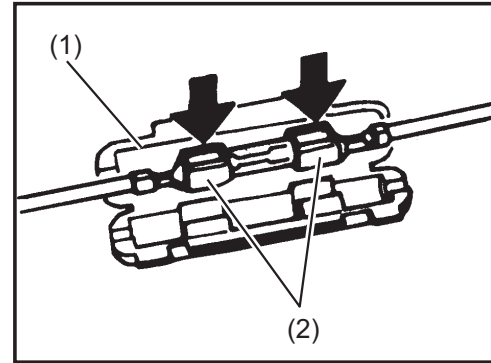


Rotating its cover opens the fuse box.

Be careful not to excessively pull the connecting wires because it may cause broken metal contact points and result in open circuit.

▲ CAUTION:

After a new fuse is installed, check the wire connector for looseness that is the main cause of trouble. Never use fuse of unspecified capacity, it may cause wire overheating and burning out.

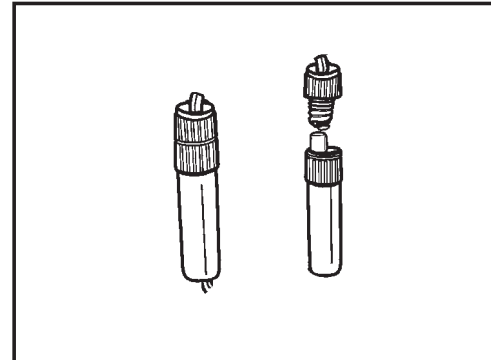

(5) ENGINE OIL CHANGE

1. Place the scooter on its main stand on level ground.
 2. Remove the oil dipstick.
 3. Remove the drain bolt to drain the oil.
 4. Refill fresh engine oil for 0.9 liter. Firmly tighten the oil dipstick.
 5. Warm up the engine and check the oil level again after the engine is stopped for 20~30 seconds.
- Specified Oil: SAE15W40 or equivalent
Capacity/Exchanging Capacity: 1.1L/0.9L

▲ CAUTION:



When changing the engine oil, also clean the oil strainer and reinstall it.

Use the specified engine oil.

Change engine oil at first 300km and then change it at every 2000km.

Engine oil will deteriorate easily and require more frequent change if the scooter is often ridden in dusty and cold areas or ridden for short distance.

Do not mix engine oil of different classes or viscosities. It may cause damage to engine.

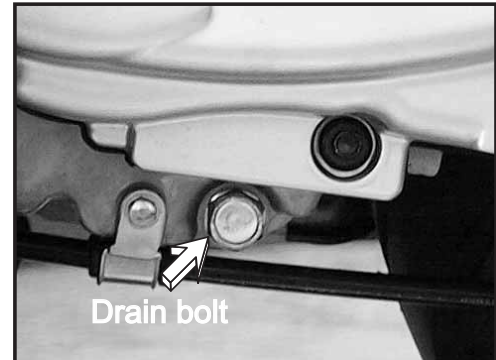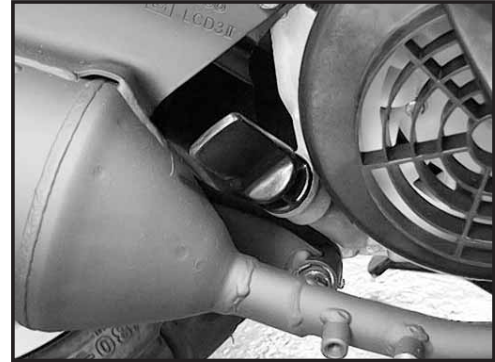

(6) TRANSMISSION GEAR OIL

Transmission oil measurement:


1. Place the scooter on its main stand on level ground.
After the engine stops for 2~3 minutes.
2. Remove the oil filler bolt (1) and check the oil level (2).
It should be up to the brim of the hole. If the level is low, add oil to raise it to the proper level.
3. After refilling, securely tighten the bolt (1).

Recommended Gear Oil: SAE #90

Capacity / Exchanging Capacity: 0.21L / 0.18 L

Transmission oil replacement

1. Place the scooter on a level place.
2. Place a container under the engine.
3. Remove the oil filler bolt (1) and drain plug (3) to drain the oil.
4. Reinstall the drain plug and tighten it.
5. Fill the engine with oil and install the oil filler bolt.
6. Start the engine and warm up for a few minutes.
While warming up, check for oil leakage. If oil leakage is found, stop the engine immediately and check for the cause.

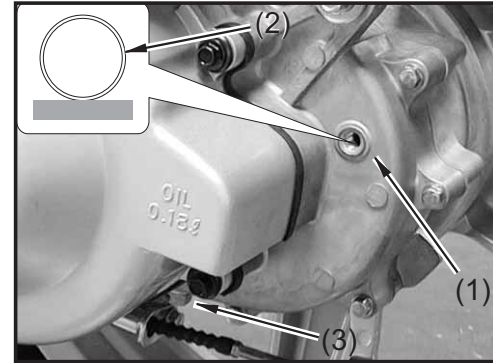

▲ CAUTION:

Add gear oil through the oil check bolt hole (2).

After refilling, use a rag to wipe clean.

Excess or insufficient gear oil will affect the engine performance.

Never use gear oil of different brand or inferior quality which may result in engine breakdown.

Change gear oil at first 300km and then change at every 4000km. Add specified gear oil whenever it is necessary.

(7) SPARK PLUG INSPECTION

Check the spark plug side electrodes for wear.
Fouling deposits on spark plug electrodes and big gap may result in weak spark.

Spark Plug Removal:

1. Remove the spark plug with a spark plug remover.
2. The installation sequence is the reverse of removal.

Spark Plug Cleaning:

1. It is better to remove spark plug deposits with a spark plug cleaner.
2. If a spark plug cleaner is not available, clean with a wire brush.

The side electrode gap is 0.6~0.7mm.

Specified Spark Plug: NGK-CR7HSA


- (1) Decarbonizing Fouling Deposits (2) Gap
(3) Wear (4) Crack/Damage

▲ CAUTION:

Clean the spark plug at every 2000km and replace it with a new one at every 5000km or when the center electrode is burned out.

First screw in the spark plug with fingers and then tighten with a spark plug wrench.

Use unspecified spark plug may damage the engine.

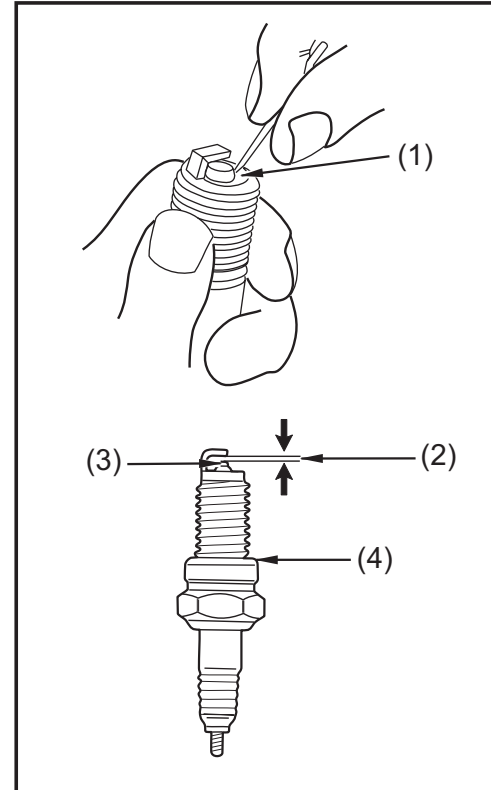

(8) BRAKE FLUID LEVEL INSPECTION /REFILLING

Add recommended brake fluid DOT 4 into the tank until the fluid level reaches the upper limit and then put on the cover and tighten the screws.

Recommended Brake Fluid: DOT 4

▲ CAUTION:

Do not mix brake fluid of different brands. It may cause brake failure and is very dangerous. When refilling brake fluid, use towels to cover and protect the painted and coated surfaces. (Replace at 10000km or every year.)




(9) RUBBER COVER INSPECTION FOR WIRE AND CABLE

The cable cores are protected by the rubber cover outside the connector. Check the rubber cover frequently for proper installation.

When washing the scooter, do not flush the rubber cover directly or brush it. Use a wet rag to wipe off dirt and dust.

- ① Rubber Cover
- ② Check Points

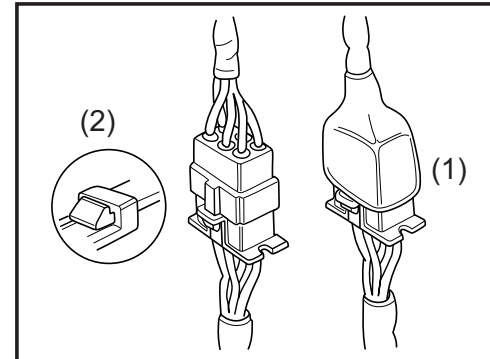

10. IMPORTANT NOTICES


(1) WHEN THE ENGINE FAILS TO START OR STOPS DURING RIDING

Is the gasoline enough?

If the fuel gauge pointer is at the red line, refill #92 or #95 nonleaded gasoline.

Is the way to start the engine correct?

Is there any other faulty parts?

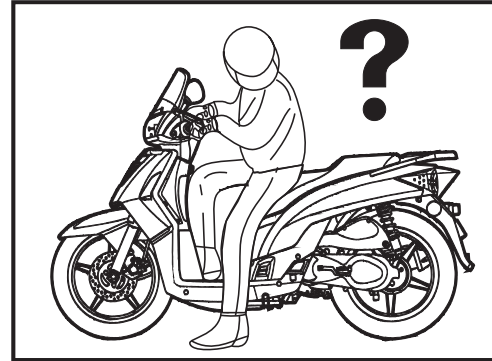


(2) IN CASE OF BREAKDOWN

For any trouble occurred during riding, go to a KYMCO distributor or service station for inspection.

▲ CAUTION:

For the sake of safety and to prevent vehicle damage and save your precious time, the pre-ride inspection is absolutely required. Please read this User's Manual carefully and get into a good habit of inspection before riding.

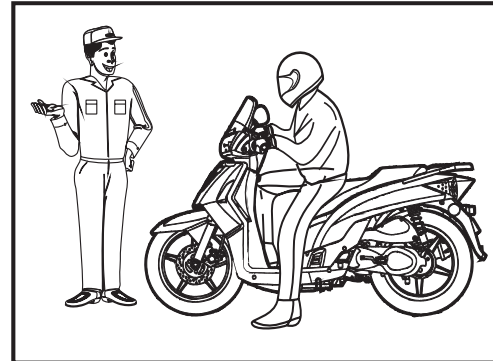

(3) POLLUTION-FREE PERIODIC MAINTENANCE SCHEDULE

In order to have a safe riding, maintain good performance, prolong the scooter service life and reduce pollution, make sure to perform the periodic inspection and maintenance.

I: Inspect and clean, lubricate, refill, repair or replace if necessary.

A: Adjust C: Clean R: Replace T: Tighten

Item	✓		Regular Service Mileage (KM)								Daily Pre-ride Inspection
	2Stroke	4Stroke	300	1000	3000	5000	7000	9000	11000	13000	
✓ Engine Oil	X	O	R	R	R	R	R	R	R	R	I
✓ Engine Oil Strainer	X	O	C		C		C		C		
✓ Gear Oil	O	O	R		R		R		R		
Cooling Water	O	O	• Replace at every 10000 km or once a year it at every 5000 km.								I
✓ Spark Plug	O	O	• Clean (C) at every 2000km and replace (R) at every 5000 km.								
✓ Valve Clearance	X	O	A		A		A		A		
✓ Carburetor	X	O			I		I		I		
✓ Drive Belt	O	O								I	
Drive Chain	O	O		A	A	A	A	A	A	A	
✓ Air Cleaner	O	O		I	R	I	R	I	R	I	
✓ Battery Electrolyte	O	O		I	I	I	I	I	I	I	I
✓ Fuel Filter Screen	O	O					R				
✓ Brake System	O	O		I		I	I	I	I	I	I
Clutch Lever Free Play	O	O	A		A	A	A	A	A	A	
✓ Bolts & Nuts	O	O	T			T			T		
✓ Tire Pressure	O	O		I	I	I	I	I	I	I	I
Motor Oil Strainer	O	X									
Engine Oil Pump	O	X	I		I		I		I		

The above items are applicable to different models. Perform suitable items for each model.
 When exceeding the listed mileage, perform maintenance according to the listed intervals.
 The air cleaner requires more frequent cleaning or replacing when ridden in unusually dusty areas.

(4) SPECIFICATIONS (125cc)


Engine Type	4-stroke single cylinder	Overall Length	2050 mm
Displacement (cc)	125	Overall Width	720 mm
Bore x Stroke (mm)	52.4x57.8	Overall Height	1300 mm
Compression Ratio	9.3	Dry Weight	116 kg
Max. Horsepower (ps/rpm)	10.3/7500 (7.6/7500kw/rpm)	Wheel Base	1350 mm
Max. Torque (kg.m/rpm)	1.0/5500 (9.8/5500 Nm/rpm)	Spark Plug	NGK-CR7HSA
Tire Size	FR:100/80-16 50P RR:120//80-16 60P	Fuel Type	#92 or 95 unleaded gasoline
Transmission Type	Non-stage transmission	Engine Oil Capacity	1.1 liter
Clutch	Dry Multi-Disc Clutch	Fuel Tank Capacity	6.8 liter
Ignition	C.D.I.	Fuse	10A / 15A
Starting System	Starting motor & kick starter	Gear Oil Type Capacity/Change	SAE 90# 0.21 L/0.18 L
Idle Speed	1700 rpm	Battery	12V6AH

SPECIFICATIONS (200cc)

Engine Type	4-stroke single cylinder	Overall Length	2050 mm
Displacement (cc)	163	Overall Width	720 mm
Bore x Stroke (mm)	60x57.8	Overall Height	1300 mm
Compression Ratio	10	Dry Weight	116 kg
Max. Horsepower (ps/rpm)	11/7500 (7.8/7500 kw/rpm)	Wheel Base	1350 mm
Max. Torque (kg.m/rpm)	1.25/6500 (12.3/6500 Nm/rpm)	Spark Plug	NGK-CR7HSA
Tire Size	FR:100/80-16 50P RR:120//80-16 60P	Fuel Type	#92 or 95 unleaded gasoline
Transmission Type	Non-stage transmission	Engine Oil Capacity	1.1 liter
Clutch	Dry Multi-Disc Clutch	Fuel Tank Capacity	6.8 liter
Ignition	C.D.I.	Fuse	10A / 15A
Starting System	Starting motor & kick starter	Gear Oil Type Capacity/Change	SAE 90# 0.21 L/0.18 L
Idle Speed	1700 rpm	Battery	12V6AH

11.KYMCO CLEAN AIR SYSTEM (FOR EURO 2)

The KYMCO Clean Air System is a secondary air suction system that helps the exhaust gases to burn more completely. When the spent fuel charge is released into the exhaust system, it is still hot enough to burn. The system allows extra air into the exhaust system so that the spent fuel charge can continue to burn. This continued burning action tends to burn up a great deal of the normally unburned gases, as well as changing a significant portion of the poisonous carbon monoxide into harmless carbon dioxide.

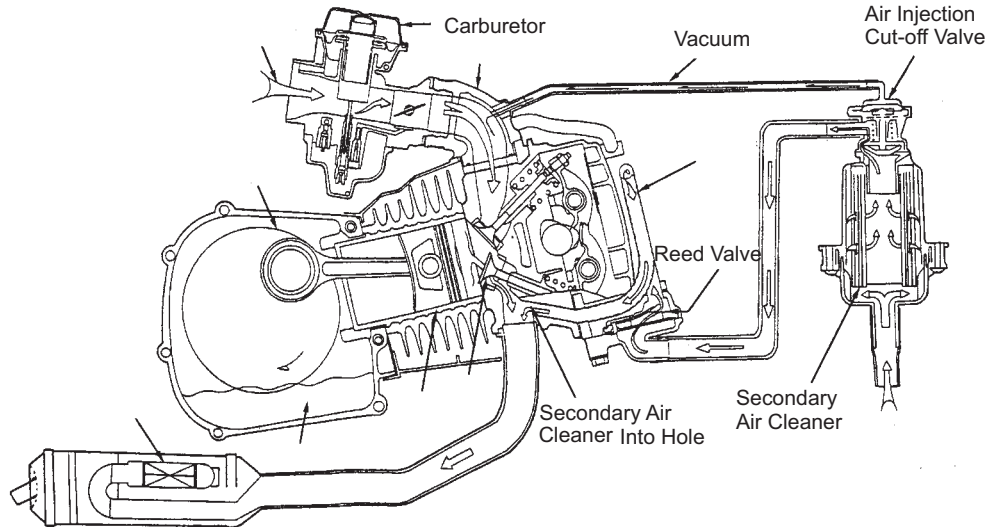

KWANG YANG MOTOR CO.,LTD.
NO.35 Wan Hsing Street, San Min District
Kaohsiung, Taiwan, Republic of China
Telephone : 886-7-3822526
FAX : 886-7-3950021

By KWANG YANG Motor Co., Ltd.
First Edition, Feb 2005
All rights reserved. Any reproduction or
unauthorized use without the written permission of
KWANG YANG Motor Co., Ltd.
is expressly prohibited.
4121-LCD3/LCD4-U00



KWANG YANG MOTOR CO.,LTD.
NO.35 Wan Hsing Street, San Min District
Kaohsiung, Taiwan, Republic of China
Telephone : 886-7-3822526
FAX : 886-7-3950021